

ALERT SERVICE BULLETIN**Inspection and re-torquing of oil spray nozzles for
ROTAX® Engine Type 915 i A and 916 iSc B (Series)**

ATA System: 72-20-00 Crankcase

MANDATORY**1) Planning information****1.1) Applicability**

All versions of the engine type:

Engine type	Serial number
915 iS A	S/N 9133453 / 9133456 / 9133458 / 9133460 / 9133464 / 9133466 / 9133467 / 9133470 / 9133472 / 9133474 / 9133476 / 9133478 / 9133481 / 9133483 / 9133487 / 9133489 / 9133490 / 9133492 / 9133494 / 9133496 / 9133498 / 9133502 / 9133506 / 9133508 / 9133510 / 9133512 / 9133513 / 9133516 / 9133518 / 9133520 / 9133522 / 9133524 / 9133526 / 9133527 / 9133530 / 9133532 / 9133534 / 9133536 / 9133540 / 9133542 / 9133543 / 9133546 / 9133548 / 9133550 / 9133552 / 9133554 / 9133556 / 9133558 / 9133560 / 9133561 / 9133564 / 9133566 / 9133567 / 9133569 / 9133570 / 9133571 / 9133572 / 9133573 / 9133574 / 9133576 / 9133577 / 9133578 / 9133579 / 9133580 / 9133582 / 9133584 / 9133585 / 9133587 / 9133588 / 9133590 / 9133592 / 9133593 / 9133595 / 9133596 / 9133597 / 9133598 / 9133600 / 9133606 / 9133608 / 9133610 / 9133613 / 9133614 / 9133615 / 9133616 / 9133617 / 9133618 / 9133622 / 9133624 / 9133626 / 9133628 / 9133629 / 9133630 / 9133631 / 9133632 / 9133634 / 9133636 / 9133638 / 9133639 / 9133640 / 9133641 / 9133642 / 9133643 / 9133644 / 9133645 / 9133647 / 9133648 / 9133649 / 9133650 / 9133651 / 9133654 / 9133656 / 9133658 / 9133660 / 9133662 / 9133666 / 9133668 / 9133670 / 9133674 / 9133675 / 9133676 / 9133678 / 9133680 / 9133684 / 9133686 / 9133688 / 9133690 / 9133692 / 9133694 / 9133696 / 9133699 / 9133701 / 9133703 / 9133705 / 9133708 / 9133711 / 9133713 / 9133716 / 9133718 / 9133722 / 9133725 / 9133726

ALERT SERVICE BULLETIN

For complete instructions and compliance to this Alert Service Bulletin refer to Alert Service Bulletin ASB-915 i-011, latest edition section 1.2 onward.

NOTE: Section 1.6) Approval: Is not required for engines of the type UL, iS (Series).
Section 3) Accomplishment: In addition: persons with adequate type-specific training.

Symbols used For meaning of the symbols used in this document, see chapter >Safety< of the latest Operators Manual for the respective engine type.

Translation into other languages might be performed in the course of language localization but does not lie within ROTAX' scope of responsibility.

In any case the original text in English language and the metric units are authoritative.