

SERVICE INSTRUCTION

B.U.D.S. Aircraft Installation Instructions for ROTAX® Engine Type 912 i Series

This SI revises SI-912 i-002 Initial Issue dated 10. September 2012.

ATA System: 76-00-00

Symbols used:

Please, pay attention to the following symbols throughout this document emphasizing particular information.

General note



Identifies an instruction which, if not followed, may cause serious injury or even fatal injury.



Identifies an instruction which, if not followed, may cause minor or moderate injury.



Denotes an instruction which if not followed, may severely damage the engine or could lead to suspension of warranty.

ENVIRONMENT NOTE

Environment note gives you tips and behaviors to environmental protection.

NOTE: Information useful for better handling.

A revision bar outside of the page margin indicates a change to text or graphic.

1) Planning information

1.1) Applicability

All versions of the engine type:

Engine type	Serial number
912 i Series	ALL

NOTE: All “BRP Utility and Diagnostic Software (B.U.D.S.) Aircraft” versions must be used on a specific engine range only. Refer to the relevant Service Instruction to identify the B.U.D.S. Aircraft version to use with a specific engine type, ECU hardware and ECU software.

1.2) Concurrent ASB/SB/SI and SL

none

1.3) Reason

- Support maintenance diagnostic with additional technical publication material on installation of B.U.D.S. Aircraft.

d05793.fm

SERVICE INSTRUCTION

1.4) Subject

B.U.D.S Aircraft Installation Instruction for ROTAX® engine type 912 i Series.

1.5) Compliance

NONE - For Information Only.

1.6) Approval

The technical content of this document is approved under the authority of DOA ref. EASA.21J.048.

1.7) Manpower

no change

1.8) Mass data

no change

1.9) Electrical load data

no change

1.10) Software accomplishment summary

no change

1.11) References

no affected

1.12) Other publications affected

not affected

1.13) Interchangeability of parts

not affected

d05793.fm

SERVICE INSTRUCTION

2) Material Information

2.1) Material- cost and availability

The B.U.D.S. Aircraft is available free of charge online via <http://www.flyrotax.com>.

2.2) Company support information

none

2.3) Material requirement per engine

none

2.4) Material requirement per spare part

none

2.5) Rework of parts

none

2.6) Special tooling/lubricant-/adhesives-/sealing compound

NOTE: For proper use and starting B.U.D.S Aircrafta proper USB-to-CAN converter is necessary.

description	part no.
B.U.D.S. set level 1	864021
B.U.D.S. set level 2	864022
B.U.D.S. set level 3	864023
B.U.D.S. set level 4	864024

SERVICE INSTRUCTION

3) Accomplishment / Instructions

NOTE: Before maintenance, review the entire documentation to make sure you have a complete understanding of the procedure and requirements.

Accomplishment

All the measure must be taken and confirmed by at least one of the following person or facilities:

- ROTAX® - Airworthiness representative
- ROTAX® - Distributors or their Service Center
- Persons approved by the respective Aviation Authority
- Person with type-specific training (applicable only for none-certified engines)

NOTE: All work has to be performed in accordance with the relevant Maintenance Manual.

Safety notice



WARNING

Proceed with this work only in a non-smoking area and not close to sparks or open flames. Switch off ignition and secure engine against unintentional operation. Secure aircraft against unauthorized operation.



WARNING

Risk of scalds and burns! Allow engine to cool sufficiently and use appropriate safety gear while performing work.

NOTICE

Should removal of a locking device (e.g. lock tabs, self-locking fasteners, etc.) be required when undergoing disassembly/assembly, always replace with a new one.

4) Introduction

This document provides information and installation instructions specific to the B.U.D.S. Aircraft Release. Outlined herein are the specific features of the released version.

5) Release Package Introduction

This document releases the files in the software package B.U.D.S. published via the ROTAX® Aircraft Engines official website. Restrictions regarding duplication and license provisions are as follows:

Copyright: Copyright © 2012 by BRP-Powertrain GmbH &Co. KG. All rights reserved.

5.1) General Operating Cautions

NOTICE


Always power down the ECU before making or breaking electrical connections.

SERVICE INSTRUCTION

6) Guidelines

All BRP Utility and Diagnostic Software (B.U.D.S.) versions available must be used on a specific product line only B.U.D.S. Aircraft is foreseen for ROTAX® 912 i Series engines, serial number range as per section 1.1 Applicability.

This Software requires a relevant ECU.

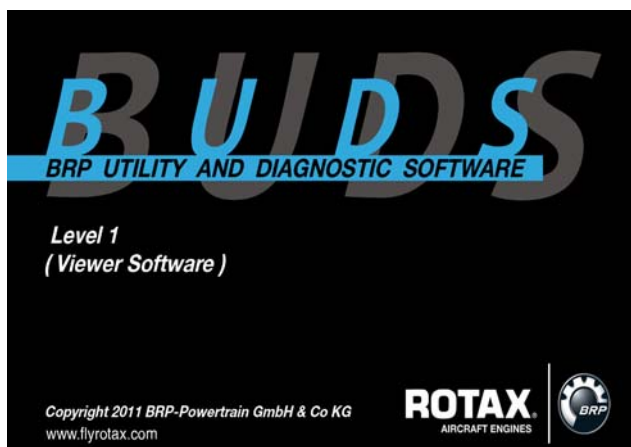

09801

7) Minimum Requirements

Minimum requirement for PC or laptop:

- Pentium 1,73 GHz single core
- 1 GB of RAM
- 100 MB of hard disk space
- Windows XP SP 3
- One unused USB port.

8) B.U.D.S. Aircraft Software

You will need to download B.U.D.S. software using a computer with Internet access.


During B.U.D.S. installation, an access to internet is not necessary.

NOTE: B.U.D.S. requires the installation of the relevant version of the PCAN-USB drivers. Please follow carefully the instructions below.

SERVICE INSTRUCTION


9) Downloading B.U.D.S. Aircraft including drivers

1. Logon to www.flyrotax.com and go to:
 - Customer Service

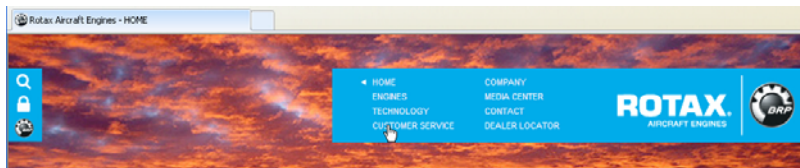


09802

- Technical Publications

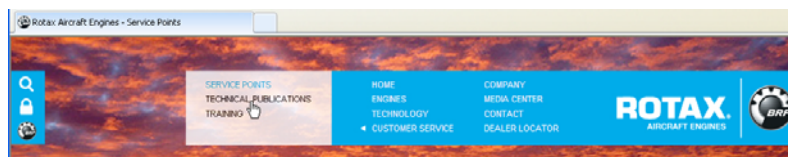

09803

2. In the box "Engine Type", choose 912 iS, 912 iS Sport or 912 iSc Sport.
3. In the box "Document Type", choose Diverses (E).

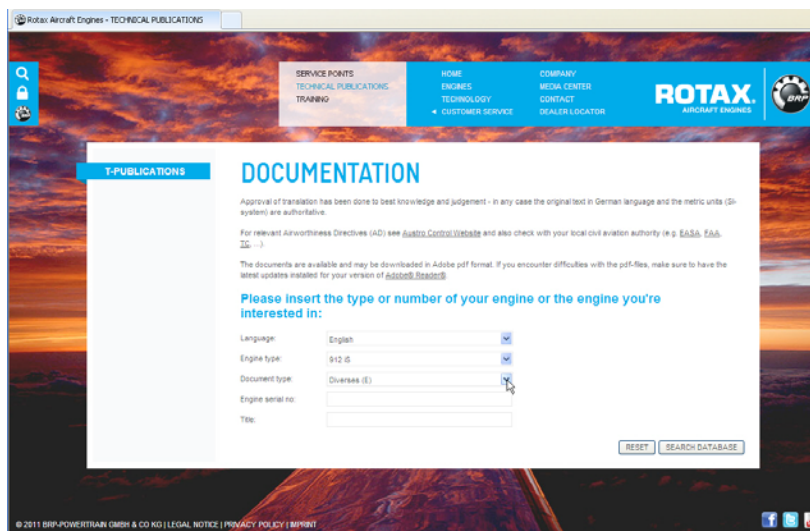

09804

d05793_fm

SERVICE INSTRUCTION

4. Click on "Search Database".

Please insert the type or number of your engine or the engine you're interested in:

Language: English

Engine type: 912 IS

Document type: Diverses (E)

Engine serial no: |

Title:

RESET SEARCH DATABASE

09805

- 5. When the search is completed, choose the most recent version of B.U.D.S. Aircraft.
- 6. Select the latest version of B.U.D.S. available for your product.
- 7. Choose the .exe file in the „Download“ column (do not rename the file). It is recommended to save it on your desktop.

NOTE: If the file is downloaded for a computer that does not have access to internet, save the file directly on an USB key (memory stick).

INFO #	ENGINE TYPE	ISSUE	REVISION	DATE	PART #	TITLE	DOWNLOAD
DIV-912	912 IS, 912 ISc	0	0	19.03.2012		BRP Utility and Diagnostic Software B.U.D.S. Aircraft V2.0	buds_setup_V2_0.exe

T-PUBLICATIONS
NUMBER OF DOCUMENTS FOUND:
1
NOTE:
 Sorting can be changed by clicking on "Date" or "Info #".
[BACK TO SELECTION](#)
[EXPORT TO EXCEL](#)

09806

8. Once the download is completed, proceed with the installation of B.U.D.S. as explained below.

d05793.fm

SERVICE INSTRUCTION

10) B.U.D.S. Installation Instructions

NOTE: To install or uninstall programs you will need administrator rights for the computer you are on.

The B.U.D.S. Installer is used to install the B.U.D.S. application program on a user PC or laptop. It is not necessary to have Windows NET, Windows Installer, or any other prerequisite software pre-installed on the PC because all necessary software is included inside the B.U.D.S. Installer. The B.U.D.S. Installer is comprised of one file: "**buds_setup.exe**".

To perform an installation, copy the Installer file onto a storage medium (ie. USB Flash Drive, CD, etc), or directly to the user PC.

To begin installation, execute "**buds_setup.exe**" by double left clicking on it from within a Windows Explorer window or the desktop. The B.U.D.S. Installer will prompt the user through the installation process, as follows:

1. Welcome dialog is displayed: Click "Next" to continue.




09809

d05793.fm


SERVICE INSTRUCTION

2. License Agreement is displayed: Click "I Agree" then "Next" to continue.

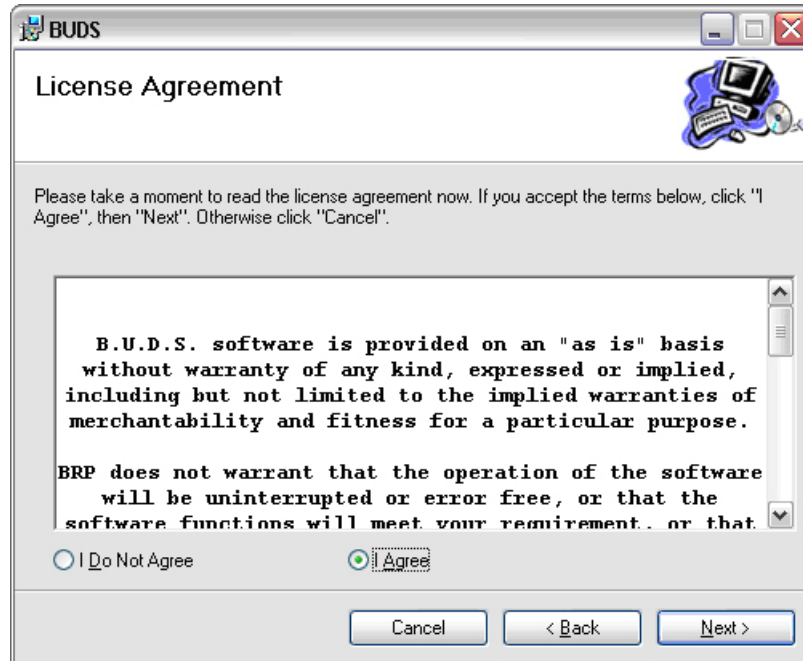

09810

3. Select Installation Folder dialog is displayed:

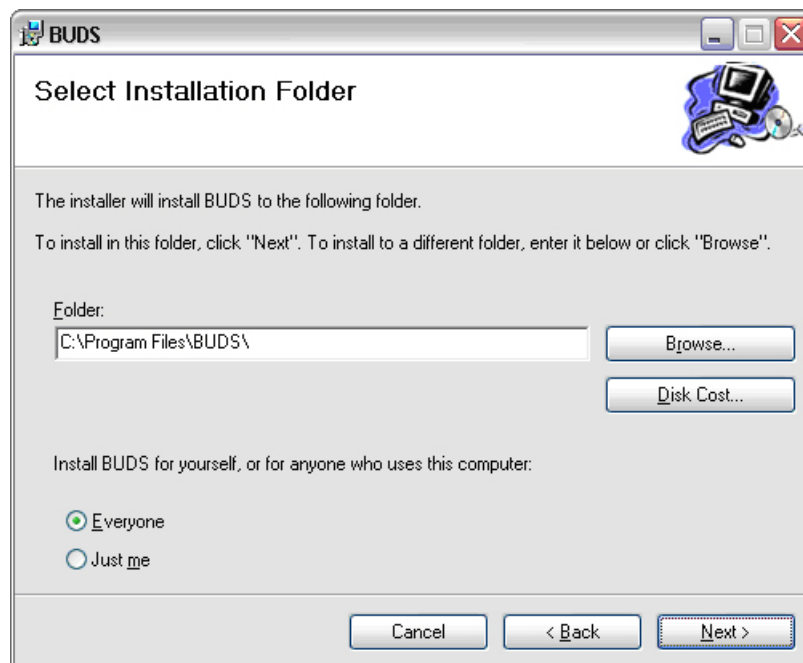


09811

d05793.fm

SERVICE INSTRUCTION


4. The installation folder may be changed by browsing, but it is recommended that the default folder be used.
5. B.U.D.S. may be installed for all users or only the current user. It is recommended to leave this setting at the default for "Everyone".
6. Confirm Installation dialog is displayed:
 - Click "Next" to continue.

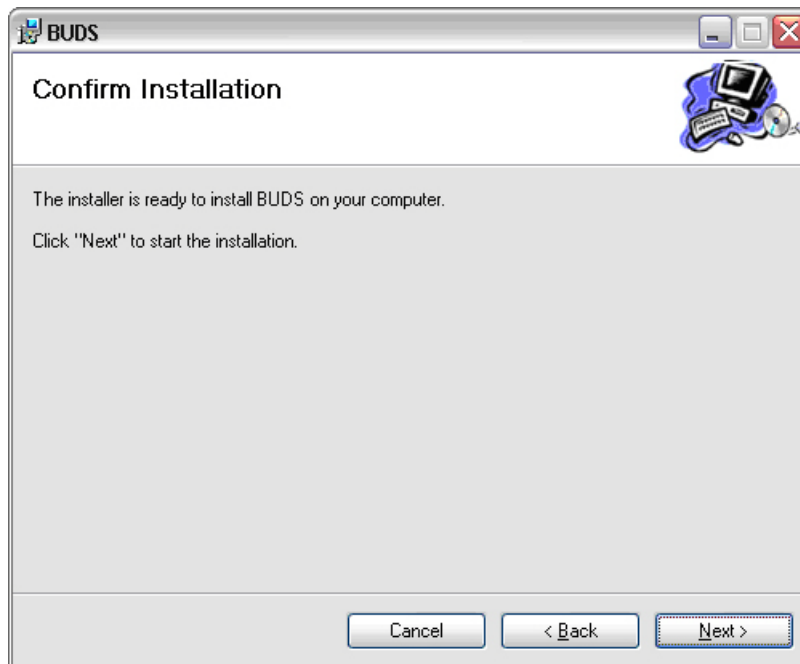

09812


SERVICE INSTRUCTION

7. B.U.D.S. installation dialog is displayed.

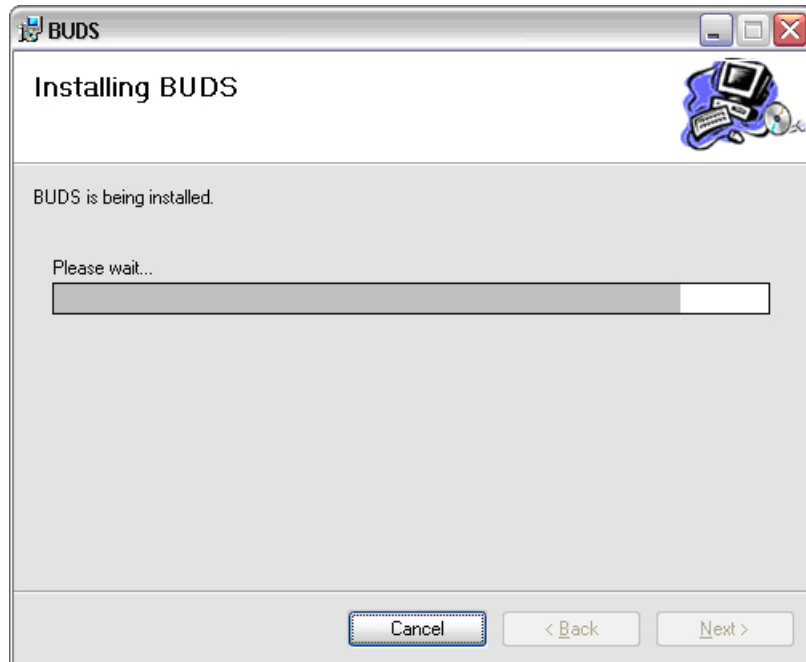

09813

8. Installation Complete dialog is displayed when done:
- Click "Close" to complete the B.U.D.S. installation.

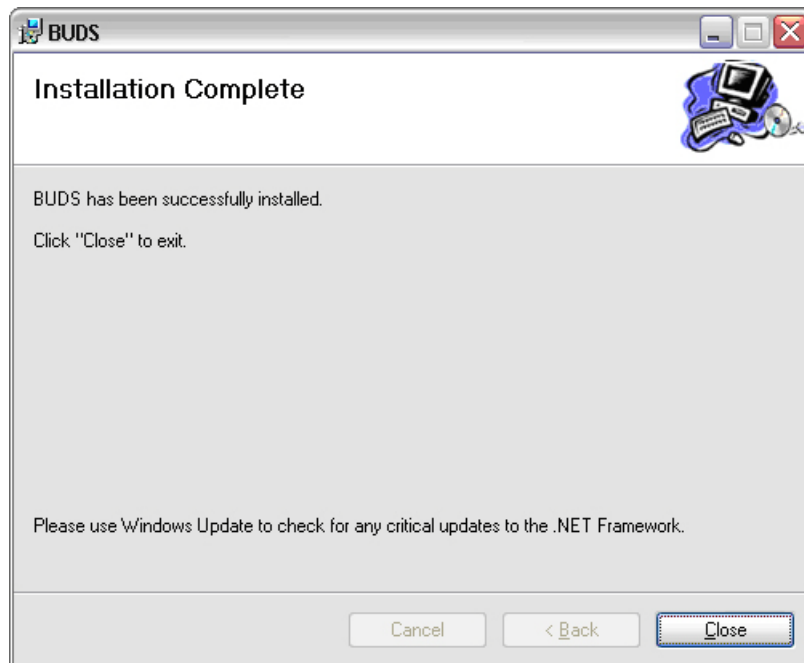

09814

d05793.fm

SERVICE INSTRUCTION

11) PCAN-USB Converter driver installation

For proper function of B.U.D.S. a hardware driver **MUST** be installed that allows your computer to communicate with the 4 different USB-to-CAN converter from Level 1 to Level 4:

- Level 1 (Viewer Software)
- Level 2 (Service Software)
- Level 3 (Maintenance Software)
- Level 4 (Professional Software)

NOTE: The hardware driver for all converters is the same. They just differ in their need for different Login data.



NOTE: During installation it is necessary to have an appropriate USB-to-CAN converter connected to an USB port on your computer. 09800

SERVICE INSTRUCTION

11.1) New Driver Installation

The driver is automatically installed at first setup of B.U.D.S..

NOTE: If you have not already installed a PCAN driver from a previous B.U.D.S. version, you will get a message on your screen to install this.

- Click on "Yes" for further installation of driver.



09815

- Click on "Next" to continue.




09816

- Click on "I agree to" when you have read through the License Agreement.

d05793.fm

SERVICE INSTRUCTION

- Click "Next" to continue.

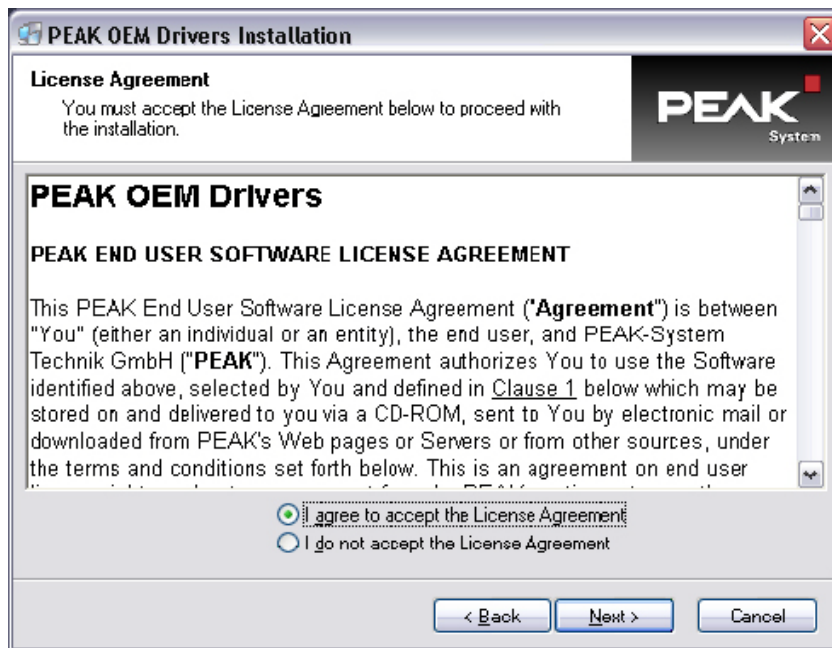

09817

- On this screen do not change the location then click on "Next" to continue.




09818

- Choose for your type of USB-to-CAN converter the PCAN-USB option of the list of drivers to be installed.

d05793.fm

SERVICE INSTRUCTION


- Click "Next" to continue.

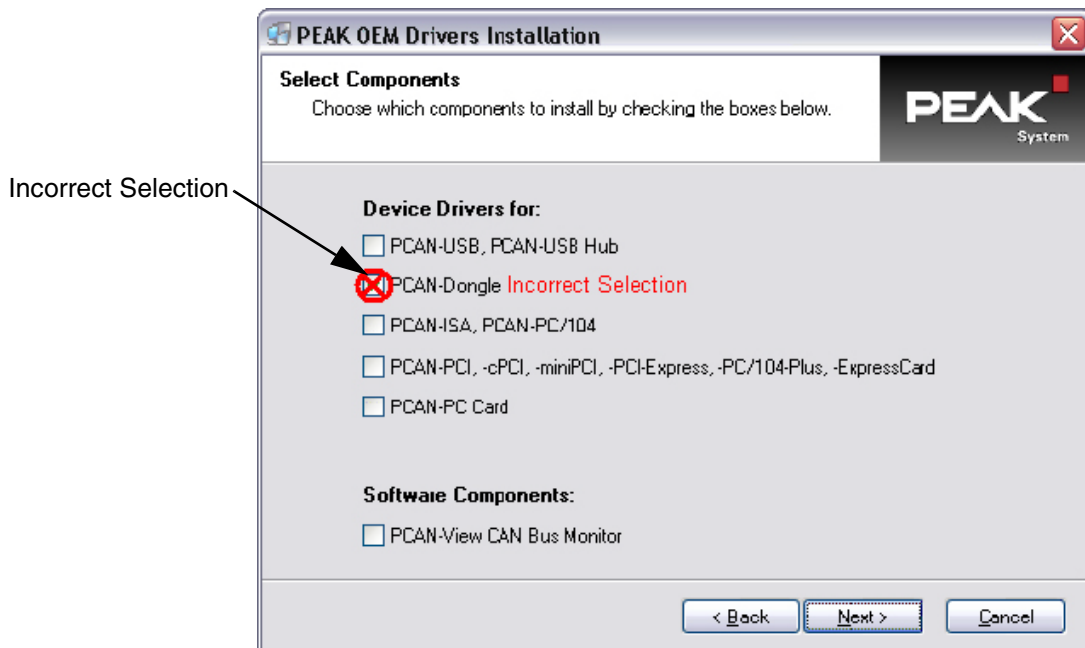

09819

NOTE: Do not use the preselected PCAN-Dongle Selection. Decoder will not communicate with this selection.


- Choose the PCAN-USB, PCAN-USB Hub selection.
- Click "Next" to continue.

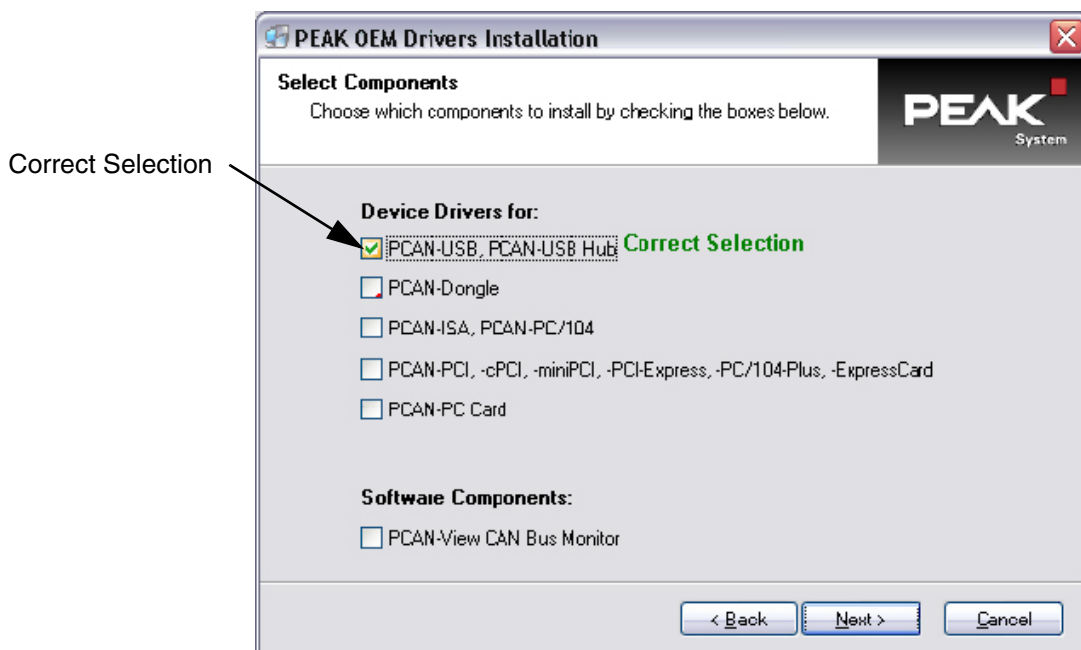

09820

SERVICE INSTRUCTION

- Click on "Next" to continue.

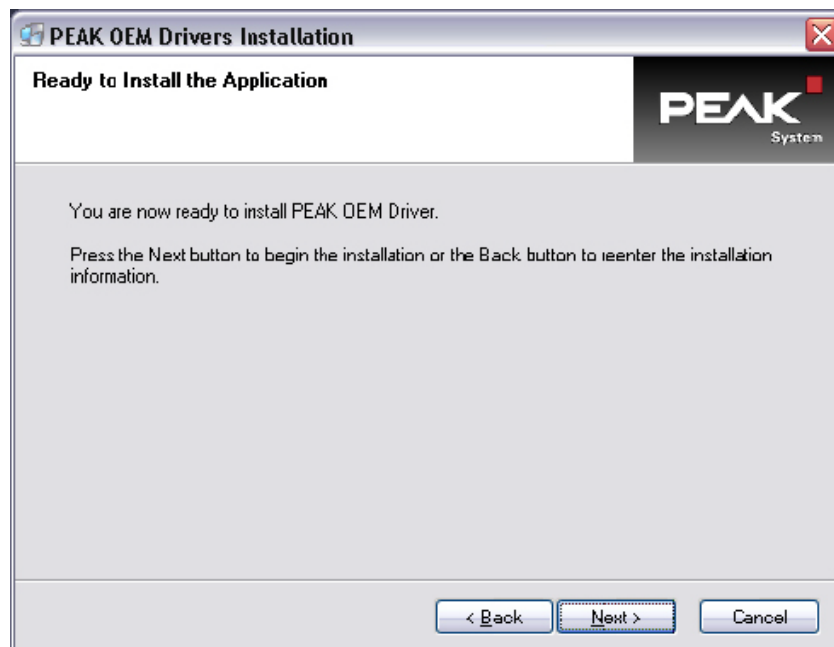

09821

- Click on "Next" to continue.

09822
d05793.fm

- Wait while "Setup" installs the converter on your PC or laptop.


SERVICE INSTRUCTION

- Installation is complete. Click "Finish>" to complete setup of PCAN driver.



09823

- Click on "Close" to complete setup of B.U.D.S..

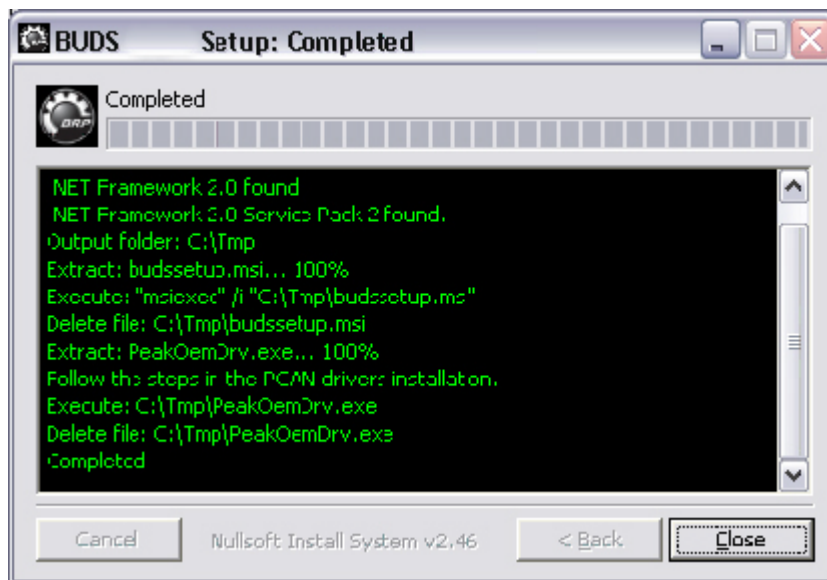

09824

After the initialization process is finished successfully the red LED on the USB-to-CAN converter is illuminated.


d05793.fm

SERVICE INSTRUCTION

11.2) Uninstalling (Previous) Driver


If you have installed any previous drivers, these drivers might need to be uninstalled. If you need to uninstall the PCAN driver proceed as follows:

- From your start menu choose control panel "Add or Remove Program".
- Double click "Change/Remove".

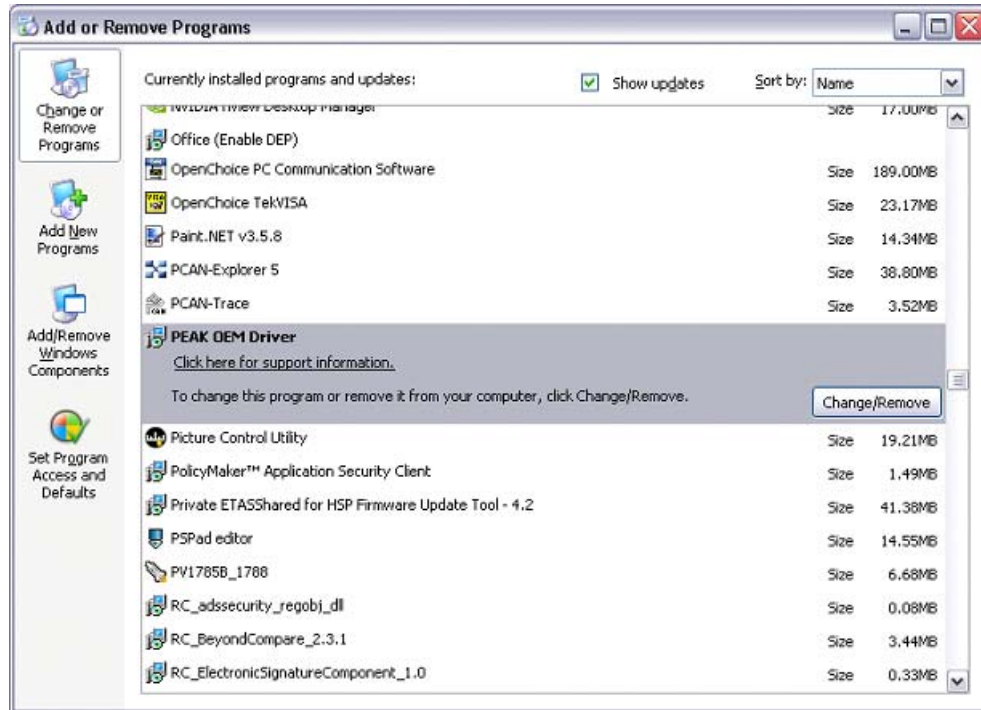

09825

SERVICE INSTRUCTION

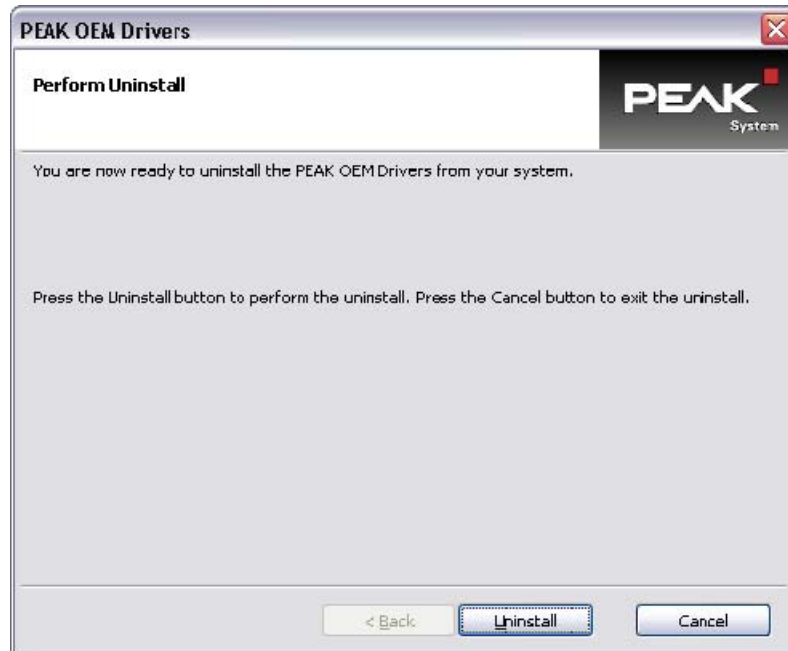

09826

- Click "Uninstall".




09827

d05793.fm

SERVICE INSTRUCTION

- Wait while "Perform Uninstall" uninstalls the driver from your computer.

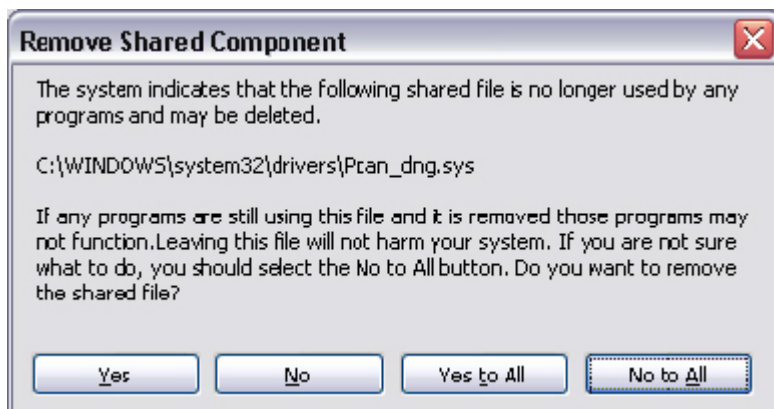


09828

- Click "Yes".
- Program removal will proceed until completion.

SERVICE INSTRUCTION

12) Using B.U.D.S. Aircraft

 To start the software, double click on the B.U.D.S. icon on your desktop or launch B.U.D.S. from its stored location: C:\Program Files\B.U.D.S.

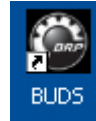

NOTE:

The USB-to-CAN converter must be connected to the USB port. For use with an ECU, connect the USB-to-CAN converter to the relevant Maintenance Port in the Aircraft or the relevant Service Wiring Harness assy.

09808

12.1) First Time Use With a New/different Level USB-to-CAN converter

The first time you use B.U.D.S., it will request a Login with Username, USB-to-CAN Serialnumber and Activation Key. Each time you install a new/different Level USB-to-CAN converter, it will request a Login with USB-to-CAN Serialnumber and Activation Key.


09807

12.2) Activation key for Login

To obtain the activation key for Login you will receive a relevant E-Mail from your distributor or get data enclosed to the B.U.D.S. set shipment on a label/tag.

12.3) Starting B.U.D.S. Aircraft


1. During program initialization, B.U.D.S. tries to communicate with the USB-to-CAN converter. If B.U.D.S. can not find it on any of the computer's ports, it displays the following screen.
 - If you click "OK", B.U.D.S. starts its termination process.

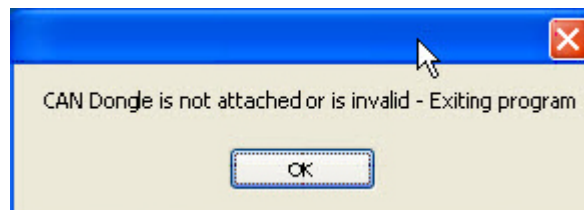

09829


SERVICE INSTRUCTION

- Then you should select "Quit".

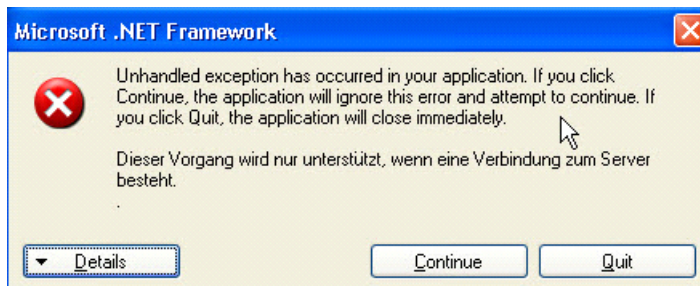

09830

- And "Close" the program execution.

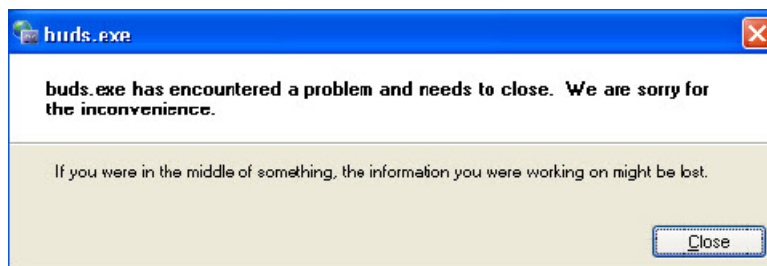

09831

2. If the converter is connected at start up in the correct way and at the port that was used during driver installation B.U.D.S. will start with a Splash Screen showing the relevant B.U.D.S. level being used depending on the applied converter level type.

12.4) Using B.U.D.S. Aircraft

The graphical user interface complies with common Windows-Standard.

For the specific information on working with B.U.D.S. Aircraft also use the „Help“-function integrated into the software.


d05793.fm

SERVICE INSTRUCTION

13) Uninstallation Instructions


B.U.D.S. Aircraft can be uninstalled by using the normal Windows Control Panel / Add or Remove Programs function. To uninstall, perform the following steps:

1. Open Windows Control Panel and select "Add or Remove Programs".
2. Select B.U.D.S. and left click "Remove."

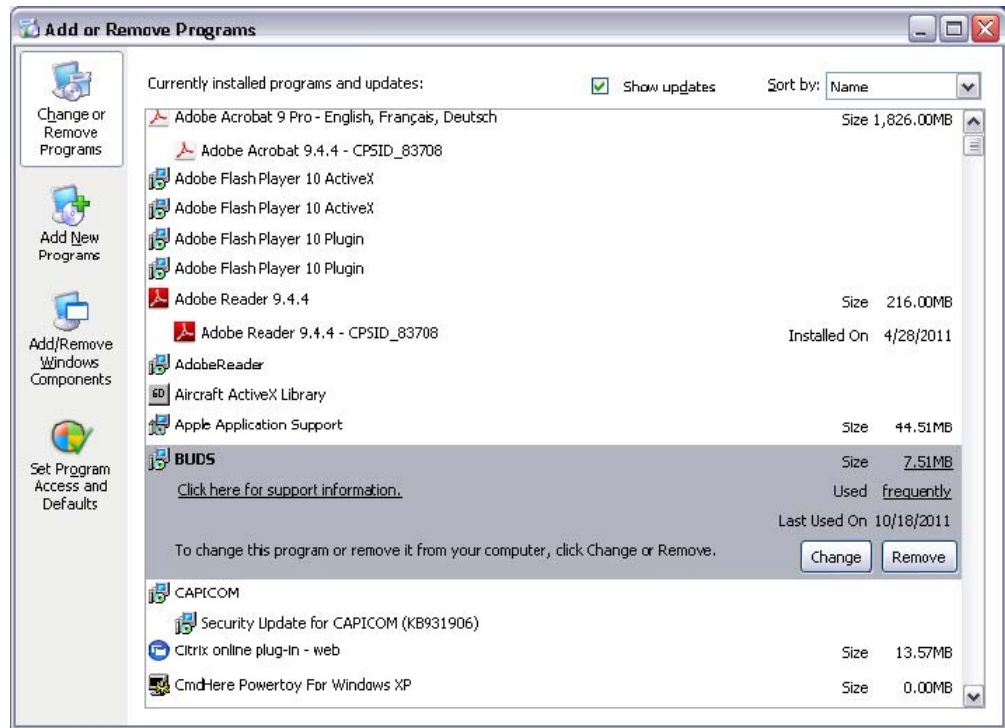

09832

3. Click "Yes" to continue or "No" to cancel the un-install.

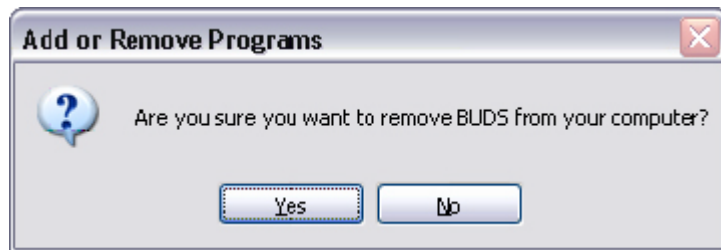


09833

d05793.fm

SERVICE INSTRUCTION

4. The un-install process takes two to three minutes to complete.

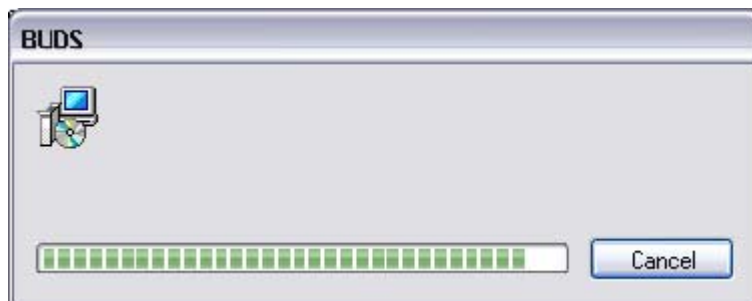

NOTE:

There is a period of apparent inactivity during the un-install. This is normal, so please be patient as the un-install removes B.U.D.S. from the Windows Registry.

09834