




## Wiring diagramm for engine type ROTAX 447 UL SCDI and 508 UL SCDI in conjunction with electronic tachometer

part no.:

897 550

**General:** When using the electronic tachometer 966 074 you must install a 10 kohm / 9 watts series resistor. This have to be installed like following wiring diagram:

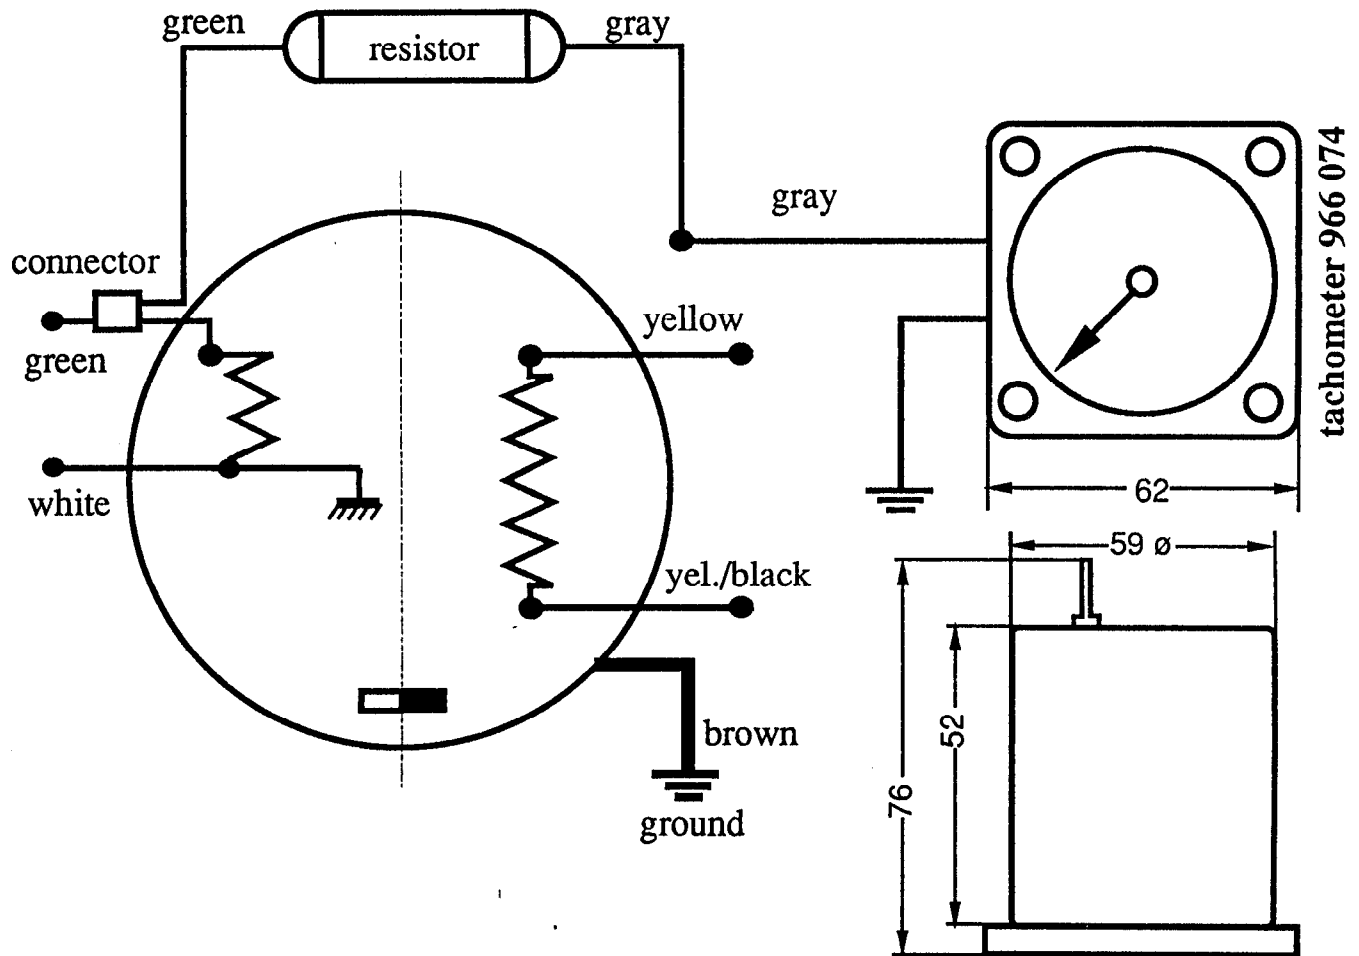

For using the tachometer 996 074 a tachometer - resistor kit ( part - no.:881 450 ) is available. This consists of :

- 2x 841 680 Taptite- screw M5 x 8
- 1x 965 680 Wiring connector 14 - 18 A
- 1x 881 455 Tachometer - resistor
- 1x 883 217 PE - bag
- 1x 897 550 Wiring diagram